

PRODUCT INFORMATION

CREATE **RC5-1, RC5-3, RC5A-3**

WATERS & STANTON

Create Rotators

NEW 

RC5-1



Probably the most rugged rotator in its price range. The Create uses a military grade motor and weighs about twice the weight of its price competitors.

- Rotation torque: 6kg/m
- Brake torque: 80kg/m
- Max. vert load: 400kg
- Max. horiz load: 800kg
- Mast size: 48-63mm
- 360 Rotation time: 60-150sec/50Hz
- Power requirement: 230V AC 80VA
- Weight: 5kg
- Cable: 7 core

RC5-3



Designed for medium size HF antennas, or VHF/UHF arrays.

- Rotation torque: 6kg/m
- Brake torque: 90kg/m
- Max. vert load: 400kg
- Max. horiz load: 800kg
- Mast size: 48-63mm
- 360 Rotation time: 60-150sec/50Hz
- Power requirement: 230V AC 80VA
- Weight: 5kg
- Cable: 7 core

RC5A-3



Designed for heavy duty HF antennas, or large VHF/UHF arrays.

- Rotation torque: 22kg/m
- Brake torque: 200kg/m
- Max. vert load: 700kg
- Max. horiz load: 1000kg
- Mast size: 48-63mm
- 360 Rotation time: 60-150sec/50Hz
- Power requirement: 230V AC 80VA
- Weight: 5kg
- Cable: 7 core

The RC5-1 is designed for medium sized antennas such as 3 or 4 element HF beams, or large VHF/UHF arrays. The RC5 control unit is designed to give ease of operation. Controls are CCW, CW and SPEED as well as POWER ON/OFF. Antenna direction is viewed on a large round dial marked off in compass points and degrees. The optional MC-2 Lower Mast Clamp is required if mounting the rotator between an upper and lower mast. Rotator requires 7-core cable.

Similar to the RC5-1, and using the same military grade motor, the control box includes preset control which sets and stops antenna direction automatically, guided by knob settings. The optional MC-2 Lower Mast Clamp is required if mounting the rotator between an upper and lower mast. Rotator requires 7-core cable.

The RC5A-3 is a heavy duty rotator ideal for large HF and antennas and VHF/UHF arrays. The control box includes preset control which sets and stops antenna direction automatically, guided by knob settings. The optional MC-2 Lower Mast Clamp is required if mounting the rotator between an upper and lower mast. Rotator requires 7-core cable.

Order As RC5-1 Medium Duty Rotator

Order As RC5-3 Medium Duty Rotator with Variable Presets

Order As RC5A-3 Heavy Duty Rotator with Variable Presets

Order As MC-2 Lower Mast Clamp

Waters & Stanton PLC, Spa House, 22 Main Road, Hockley, Essex, SS5 4QS, UK.

Tel: 01702-206835 Fax: 01702-205843 Freephone Orders: 08000 73 73 88

E-mail: sales@wsplc.com Web:www.wsplc.com